深圳市亿显国际科技有限公司	
YES-DISPLAY TECHNOLOGY LIMITED.	

8.0 寸液晶显示屏 8.0 Inch LCD Display Screen

File NO. REV A/01 http://www.yes-display.com

SPECIFICATION FOR

Module:YS-T080002D V1.0

Designed by	R&D Checked by	Quality Department by	Approved by

Approval by Customer:

OK

NG, Problem survey

Approved By_____

1	亿显国际科技有限公司 PLAY TECHNOLOGY LIMITED.		8. 0 寸液晶显示屏 8.0 Inch LCD Display Screen
File NO.	REV	A/01	http://www.yes-display.com

Revision Record

REV DATE	Contents Before Change	Contents After Change	Note
2023/12/06	NEW ISSUE By Ding;		

深圳市亿显国际科技有限公司
YES-DISPLAY TECHNOLOGY LIMITED.

8.0 寸液晶显示屏 8.0 Inch LCD Display Screen

File NO. REV A/01 http://www.yes-display.com

Contents

List	Description	Page No.
	Cover	1
	Revision Record	2
	Contents	3
1	Technical parameters	4
2	Block Dimension	5
3	Outline Dimensions	6
4	Input terminal Pin Assignment Description	7
5	LCD Optical Characteristics	9
6	TFT Electrical Characteristics	12
7	Timing Characteristics	14
8	Inspection Standard	15
9	Reliability Test Conditions and Methods	20
10	Cautions and Handling Precautions	22
11	Packing Method	25

8.0 寸液晶显示屏 8.0 Inch LCD Display Screen

File NO. REV A/01 http://www.yes-display.com

1. Technical parameters


ITEM	STANDARD VALUES	UNITS
LCD type	8.0TFT	
Dot arrangement	800(RGB)×1280	dots
Color filter array	RGB vertical stripe	
Display mode	IPS/ Transmission / Normally Black	-
Eyes Viewing Direction	ALL	
Driver IC	NV3051F-L	
Module size	114.66(W)×184.16(H)×2.6(T)(Exclude FPC)	mm
Active area	107.64(W)×127.22(H)	mm
Interface	LVDS	
Operating temperature	-20 ~ +60	°C
Storage temperature	-20 ~ +60	°C
Back Light	White LED*21	

2. Block Dimension

深圳市亿显国际科技有限公司
YES-DISPLAY TECHNOLOGY LIMITED.

8.0 寸液晶显示屏 8.0 Inch LCD Display Screen


File NO. REV A/01 http://www.yes-display.com

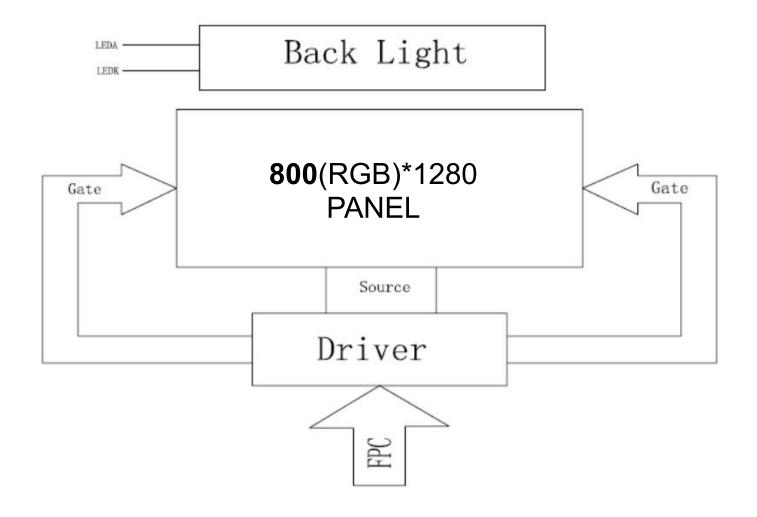

8.0 寸液晶显示屏 8.0 Inch LCD Display Screen

File NO. REV A/01 http://www.yes-display.com

3. Outline Dimensions

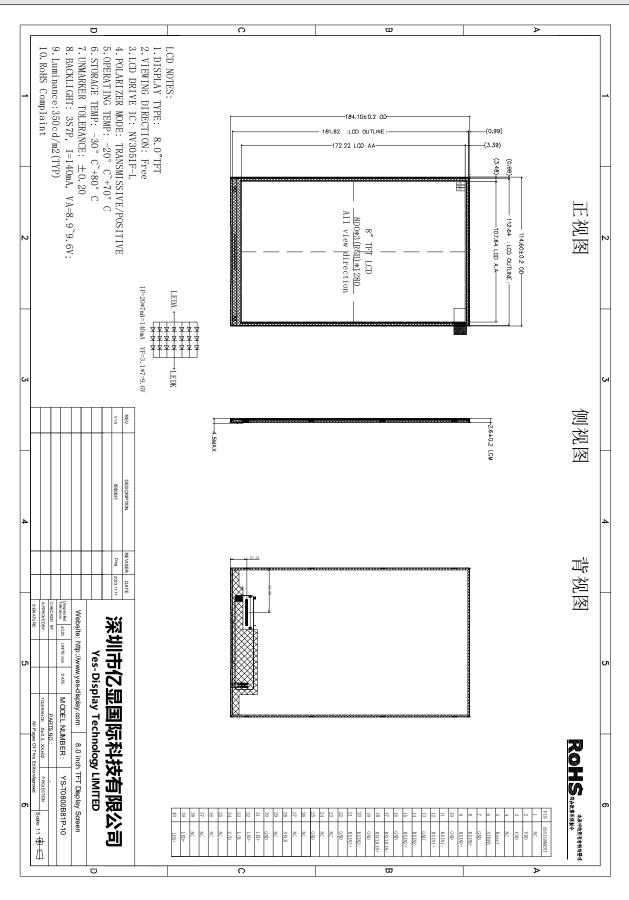

8.0 寸液晶显示屏 8.0 Inch LCD Display Screen

File NO. REV A/01 http://www.yes-display.com

4. Input terminal Pin Assignment Description

1	Pin No.	Symbol	Description
2-3 VDD Power Supply (2.8V) 4 NC No Connection 5 RESET RESET PIN 6 STBYB Power Supply for BL Anode 7 GND Connect to Ground. 8 RXIND- -LVDS differential data input (Data lane 0). 9 RXIND+ +LVDS differential Data input (Data lane 0). 10 GND Connect to Ground. 11 RXIN1+ -LVDS Differential Data input (Data lane 1). 12 RXIN1+ +LVDS Differential Data input (Data lane 2). 13 GND Connect to Ground. 14 RXIN2+ +LVDS Differential Data input (Data lane 2). 15 RXIN2+ +LVDS Differential Data input. 16 GND Connect to Ground. 17 RXCLKIN- +LVDS Differential Data input. 18 RXCLKIN- +LVDS Differential Data input. 19 GND Connect to Ground. 20 RXIN3- -LVDS Differential Data input (Data lane 3). 21 RXIN3+ +LVDS Differential Data input (Data			·
4 NC No Connection 5 RESET RESET PIN 6 STBYB Power Supply for BL Anode 7 GND Connect to Ground. 8 RXIN0- -LVDS differential data input (Data lane 0). 9 RXIN0+ +LVDS differential data input (Data lane 0). 10 GND Connect to Ground. 11 RXIN1- -LVDS Differential Data Input (Data lane 1). 12 RXIN1+ +LVDS Differential Data Input (Data lane 1). 13 GND Connect to Ground. 14 RXIN2- -LVDS Differential Data Input (Data lane 2). 15 RXIN2+ +LVDS Differential Data Input. 16 GND Connect to Ground. 17 RXCLKIN- +LVDS Differential Data Input. 19 GND Connect to Ground. 20 RXIN3- -LVDS Differential Data Input(Data lane 3). 21 RXIN3+ +LVDS Differential Data Input(Data lane 3). 22 GND Connect to Ground. 23-24 NC No Connection			
5 RESET RESET PIN 6 STBYB Power Supply for BL Anode 7 GND Connect to Ground. 8 RXINO- -LVDS differential data input (Data lane 0). 9 RXINO+ +LVDS differential data input (Data lane 0). 10 GND Connect to Ground. 11 RXIN1- -LVDS Differential Data Input (Data lane 1). 12 RXIN1+ +LVDS Differential Data Input (Data lane 1). 13 GND Connect to Ground. 14 RXIN2- -LVDS Differential Data Input (Data lane 2). 15 RXIN2+ +LVDS Differential Data Input (Data lane 2). 16 GND Connect to Ground. 17 RXCLKIN- -LVDS Differential Data Input. 18 RXCLKIN+ +LVDS Differential Data Input (Data lane 3). 20 RXIN3- -LVDS Differential Data Input (Data lane 3). 21 RXIN3+ +LVDS Differential Data Input (Data lane 3). 22 GND Connect to Ground. 23-24 NC No Connection 26-27 <t< td=""><td></td><td></td><td></td></t<>			
6 STBYB Power Supply for BL Anode 7 GND Connect to Ground. 8 RXINO- LVDS differential data input (Data lane 0). 9 RXINO+ +LVDS differential data input(Data lane 0). 10 GND Connect to Ground. 11 RXIN1- LVDS Differential Data Input(Data lane 1). 12 RXIN1+ +LVDS Differential Data Input(Data lane 1). 13 GND Connect to Ground. 14 RXIN2- LVDS Differential Data Input(Data lane 2). 15 RXIN2+ +LVDS Differential Data Input(Data lane 2). 16 GND Connect to Ground. 17 RXCLKIN- LVDS Differential Data Input(Data lane 2). 18 RXCLKIN+ +LVDS Differential Data Input. 19 GND Connect to Ground. 20 RXIN3- LVDS Differential Data Input. 21 RXIN3+ +LVDS Differential Data Input(Data lane 3). 22 GND Connect to Ground. 23-24 NC No Connection 25 GND Connect to Ground. 26-27 NC No Connection 28 SELB/NC No Connection 29 NC No Connection 30 GND Connect to Ground. 31-32 LED- LED Cathode 33 L/R Select left to right scanning direction 34 U/D Select up or down scanning direction 35-38 NC No Connection			
7 GND Connect to Ground. 8 RXIN0LVDS differential data input (Data lane 0). 9 RXIN0+ +LVDS differential data input (Data lane 0). 10 GND Connect to Ground. 11 RXIN1LVDS Differential Data Input(Data lane 1). 12 RXIN1+ +LVDS Differential Data Input(Data lane 1). 13 GND Connect to Ground. 14 RXIN2LVDS Differential Data Input(Data lane 2). 15 RXIN2+ +LVDS Differential Data Input(Data lane 2). 16 GND Connect to Ground. 17 RXCLKINLVDS Differential Data Input. 18 RXCLKIN+ +LVDS Differential Data Input. 19 GND Connect to Ground. 20 RXIN3LVDS Differential Data Input. 21 RXIN3+ +LVDS Differential Data Input(Data lane 3). 22 GND Connect to Ground. 23-24 NC No Connect to Ground. 25 GND Connect to Ground. 26-27 NC No Connection 28 SELB/NC No Connection 29 NC No Connection 30 GND Connect to Ground. 31-32 LED- LED Cathode 33 L/R Select left to right scanning direction 34 U/D Select up or down scanning direction 35-38 NC No Connection		STBYB	Power Supply for BL Anode
9 RXIN0+ +LVDS differential data input(Data lane 0). 10 GND Connect to Ground. 11 RXIN1LVDS Differential Data Input(Data lane 1). 12 RXIN1+ +LVDS Differential Data Input(Data lane 1). 13 GND Connect to Ground. 14 RXIN2LVDS Differential Data Input(Data lane 2). 15 RXIN2+ +LVDS Differential Data Input(Data lane 2). 16 GND Connect to Ground. 17 RXCLKINLVDS Differential Data Input(Data lane 2). 18 RXCLKIN+ +LVDS Differential Data Input. 19 GND Connect to Ground. 20 RXIN3LVDS Differential Data Input(Data lane 3). 21 RXIN3+ +LVDS Differential Data Input(Data lane 3). 22 GND Connect to Ground. 23-24 NC No Connect to Ground. 25 GND Connect to Ground. 26-27 NC No Connection 28 SELB/NC No Connection 29 NC No Connection 30 GND Connect to Ground. 31-32 LED- LED Cathode 33 L/R Select left to right scanning direction 34 U/D Select up or down scanning direction 35-38 NC No Connection		GND	
10 GND Connect to Ground. 11 RXIN1LVDS Differential Data Input(Data lane 1). 12 RXIN1+ +LVDS Differential Data Input(Data lane 1). 13 GND Connect to Ground. 14 RXIN2LVDS Differential Data Input(Data lane 2). 15 RXIN2+ +LVDS Differential Data Input(Data lane 2). 16 GND Connect to Ground. 17 RXCLKINLVDS Differential Data Input. 18 RXCLKIN+ +LVDS Differential Data Input. 19 GND Connect to Ground. 20 RXIN3LVDS Differential Data Input(Data lane 3). 21 RXIN3+ +LVDS Differential Data Input(Data lane 3). 22 GND Connect to Ground. 23-24 NC No Connect to Ground. 25 GND Connect to Ground. 26-27 NC No Connection 28 SELB/NC No Connection 29 NC No Connection 30 GND Connect to Ground. 31-32 LED- LED Cathode 33 L/R Select left to right scanning direction 34 U/D Select up or down scanning direction 35-38 NC No Connection	8	RXIN0-	-LVDS differential data input (Data lane 0).
11 RXIN1LVDS Differential Data Input(Data lane 1). 12 RXIN1+ +LVDS Differential Data Input(Data lane 1). 13 GND Connect to Ground. 14 RXIN2LVDS Differential Data Input(Data lane 2). 15 RXIN2+ +LVDS Differential Data Input(Data lane 2). 16 GND Connect to Ground. 17 RXCLKINLVDS Differential Data Input. 18 RXCLKIN+ +LVDS Differential Data Input. 19 GND Connect to Ground. 20 RXIN3LVDS Differential Data Input(Data lane 3). 21 RXIN3+ +LVDS Differential Data Input(Data lane 3). 22 GND Connect to Ground. 23-24 NC No Connect to Ground. 25 GND Connect to Ground. 26-27 NC No Connection 28 SELB/NC No Connection 29 NC No Connection 30 GND Connect to Ground. 31-32 LED- LED Cathode 33 L/R Select left to right scanning direction 34 U/D Select up or down scanning direction	9	RXIN0+	+LVDS differential data input(Data lane 0).
12 RXIN1+ +LVDS Differential Data Input(Data lane 1). 13 GND Connect to Ground. 14 RXIN2LVDS Differential Data Input(Data lane 2). 15 RXIN2+ +LVDS Differential Data Input(Data lane 2). 16 GND Connect to Ground. 17 RXCLKINLVDS Differential Data Input. 18 RXCLKIN+ +LVDS Differential Data Input. 19 GND Connect to Ground. 20 RXIN3LVDS Differential Data Input(Data lane 3). 21 RXIN3+ +LVDS Differential Data Input(Data lane 3). 22 GND Connect to Ground. 23-24 NC No Connection 25 GND Connect to Ground. 26-27 NC No Connection 28 SELB/NC No Connection 29 NC No Connection 30 GND Connect to Ground. 31-32 LED- LED Cathode 33 L/R Select left to right scanning direction 34 U/D Select up or down scanning direction 35-38 NC No Connection	10	GND	Connect to Ground.
13 GND Connect to Ground. 14 RXIN2LVDS Differential Data Input(Data lane 2). 15 RXIN2+ +LVDS Differential Data Input(Data lane 2). 16 GND Connect to Ground. 17 RXCLKINLVDS Differential Data Input. 18 RXCLKIN+ +LVDS Differential Data Input. 19 GND Connect to Ground. 20 RXIN3LVDS Differential Data Input(Data lane 3). 21 RXIN3+ +LVDS Differential Data Input(Data lane 3). 22 GND Connect to Ground. 23-24 NC No Connection 25 GND Connect to Ground. 26-27 NC No Connection 28 SELB/NC No Connection 29 NC No Connection 30 GND Connect to Ground. 31-32 LED- LED Cathode 33 L/R Select left to right scanning direction 34 U/D Select up or down scanning direction 35-38 NC No Connection	11	RXIN1-	-LVDS Differential Data Input(Data lane 1).
14 RXIN2LVDS Differential Data Input(Data lane 2). 15 RXIN2+ +LVDS Differential Data Input(Data lane 2). 16 GND Connect to Ground. 17 RXCLKINLVDS Differential Data Input. 18 RXCLKIN+ +LVDS Differential Data Input. 19 GND Connect to Ground. 20 RXIN3LVDS Differential Data Input(Data lane 3). 21 RXIN3+ +LVDS Differential Data Input(Data lane 3). 22 GND Connect to Ground. 23-24 NC No Connection 25 GND Connect to Ground. 26-27 NC No Connection 28 SELB/NC No Connection 29 NC No Connection 30 GND Connect to Ground. 31-32 LED- LED Cathode 33 L/R Select left to right scanning direction 34 U/D Select up or down scanning direction 35-38 NC No Connection	12	RXIN1+	+LVDS Differential Data Input(Data lane 1).
15 RXIN2+ +LVDS Differential Data Input(Data lane 2). 16 GND Connect to Ground. 17 RXCLKINLVDS Differential Data Input. 18 RXCLKIN+ +LVDS Differential Data Input. 19 GND Connect to Ground. 20 RXIN3LVDS Differential Data Input(Data lane 3). 21 RXIN3+ +LVDS Differential Data Input(Data lane 3). 22 GND Connect to Ground. 23-24 NC No Connection 25 GND Connect to Ground. 26-27 NC No Connection 28 SELB/NC No Connection 29 NC No Connection 30 GND Connect to Ground. 31-32 LED- LED Cathode 33 L/R Select left to right scanning direction 34 U/D Select up or down scanning direction 35-38 NC No Connection	13	GND	Connect to Ground.
16 GND Connect to Ground. 17 RXCLKIN- 18 RXCLKIN+ +LVDS Differential Data Input. 19 GND Connect to Ground. 20 RXIN3- 21 RXIN3+ +LVDS Differential Data Input(Data lane 3). 21 RXIN3+ +LVDS Differential Data Input(Data lane 3). 22 GND Connect to Ground. 23-24 NC No Connection 25 GND Connect to Ground. 26-27 NC No Connection 28 SELB/NC No Connection 29 NC No Connection 30 GND Connect to Ground. 31-32 LED- LED Cathode 33 L/R Select left to right scanning direction 34 U/D Select up or down scanning direction 35-38 NC No Connection	14	RXIN2-	-LVDS Differential Data Input(Data lane 2).
17 RXCLKIN- 18 RXCLKIN+ 19 GND Connect to Ground. 20 RXIN3- 21 RXIN3+ 22 GND Connect to Ground. 23-24 NC No Connect to Ground. 25 GND Connect to Ground. 26-27 NC No Connect to Ground. 28 SELB/NC No Connection 29 NC No Connection 30 GND Connect to Ground. 31-32 LED- 1/R Select left to right scanning direction 34 U/D Select up or down scanning direction 35-38 NC No Connection	15	RXIN2+	+LVDS Differential Data Input(Data lane 2).
18 RXCLKIN+ +LVDS Differential Data Input. 19 GND Connect to Ground. 20 RXIN3LVDS Differential Data Input(Data lane 3). 21 RXIN3+ +LVDS Differential Data Input(Data lane 3). 22 GND Connect to Ground. 23-24 NC No Connection 25 GND Connect to Ground. 26-27 NC No Connection 28 SELB/NC No Connection 29 NC No Connection 30 GND Connect to Ground. 31-32 LED- LED Cathode 33 L/R Select left to right scanning direction 34 U/D Select up or down scanning direction 35-38 NC No Connection	16	GND	Connect to Ground.
19 GND Connect to Ground. 20 RXIN3LVDS Differential Data Input(Data lane 3). 21 RXIN3+ +LVDS Differential Data Input(Data lane 3). 22 GND Connect to Ground. 23-24 NC No Connection 25 GND Connect to Ground. 26-27 NC No Connection 28 SELB/NC No Connection 29 NC No Connection 30 GND Connect to Ground. 31-32 LED- LED Cathode 33 L/R Select left to right scanning direction 34 U/D Select up or down scanning direction 35-38 NC No Connection	17	RXCLKIN-	-LVDS Differential Data Input.
20 RXIN3LVDS Differential Data Input(Data lane 3). 21 RXIN3+ +LVDS Differential Data Input(Data lane 3). 22 GND Connect to Ground. 23-24 NC No Connection 25 GND Connect to Ground. 26-27 NC No Connection 28 SELB/NC No Connection 29 NC No Connection 30 GND Connect to Ground. 31-32 LED- LED Cathode 33 L/R Select left to right scanning direction 34 U/D Select up or down scanning direction 35-38 NC No Connection	18	RXCLKIN+	+LVDS Differential Data Input.
21 RXIN3+ +LVDS Differential Data Input(Data lane 3). 22 GND Connect to Ground. 23-24 NC No Connection 25 GND Connect to Ground. 26-27 NC No Connection 28 SELB/NC No Connection 29 NC No Connection 30 GND Connect to Ground. 31-32 LED- LED Cathode 33 L/R Select left to right scanning direction 34 U/D Select up or down scanning direction 35-38 NC No Connection	19	GND	Connect to Ground.
22 GND Connect to Ground. 23-24 NC No Connection 25 GND Connect to Ground. 26-27 NC No Connection 28 SELB/NC No Connection 29 NC No Connection 30 GND Connect to Ground. 31-32 LED- LED Cathode 33 L/R Select left to right scanning direction 34 U/D Select up or down scanning direction 35-38 NC No Connection	20	RXIN3-	-LVDS Differential Data Input(Data lane 3).
23-24 NC No Connection 25 GND Connect to Ground. 26-27 NC No Connection 28 SELB/NC No Connection 29 NC No Connection 30 GND Connect to Ground. 31-32 LED- LED Cathode 33 L/R Select left to right scanning direction 34 U/D Select up or down scanning direction 35-38 NC No Connection	21	RXIN3+	+LVDS Differential Data Input(Data lane 3).
25 GND Connect to Ground. 26-27 NC No Connection 28 SELB/NC No Connection 29 NC No Connection 30 GND Connect to Ground. 31-32 LED- LED Cathode 33 L/R Select left to right scanning direction 34 U/D Select up or down scanning direction 35-38 NC No Connection	22	GND	Connect to Ground.
26-27 NC No Connection 28 SELB/NC No Connection 29 NC No Connection 30 GND Connect to Ground. 31-32 LED- LED Cathode 33 L/R Select left to right scanning direction 34 U/D Select up or down scanning direction 35-38 NC No Connection	23-24	NC	No Connection
28 SELB/NC No Connection 29 NC No Connection 30 GND Connect to Ground. 31-32 LED- LED Cathode 33 L/R Select left to right scanning direction 34 U/D Select up or down scanning direction 35-38 NC No Connection	25	GND	Connect to Ground.
29 NC No Connection 30 GND Connect to Ground. 31-32 LED- LED Cathode 33 L/R Select left to right scanning direction 34 U/D Select up or down scanning direction 35-38 NC No Connection	26-27	NC	No Connection
30 GND Connect to Ground. 31-32 LED- LED Cathode 33 L/R Select left to right scanning direction 34 U/D Select up or down scanning direction 35-38 NC No Connection	28	SELB/NC	No Connection
31-32 LED- LED Cathode 33 L/R Select left to right scanning direction 34 U/D Select up or down scanning direction 35-38 NC No Connection	29	NC	No Connection
33 L/R Select left to right scanning direction 34 U/D Select up or down scanning direction 35-38 NC No Connection	30	GND	Connect to Ground.
34 U/D Select up or down scanning direction 35-38 NC No Connection	31-32	LED-	LED Cathode
35-38 NC No Connection	33	L/R	Select left to right scanning direction
	34	U/D	Select up or down scanning direction
39-40 LED+ Power Supply for BL Anode	35-38	NC	No Connection
	39-40	LED+	Power Supply for BL Anode

8.0 寸液晶显示屏 8.0 Inch LCD Display Screen

File NO. REV A/01 http://www.yes-display.com

5. LCD Optical Characteristics

Parameter		Symbol	Condition	Min.	Тур.	Max.	Unit	Remark						
	Horizontal	Θ_3		-	80	¥	Deg.							
Viewing Angle	Horizontal	Θ ₉	CR > 10	-	80	¥	Deg.	WV-Pol						
range	Vertical	Θ ₁₂	CK > 10	-	80	7.	Deg.	Note 1						
	vertical	Θ_6			80	μ.	Deg.							
Luminance Co	ntrast ratio	CR		900	1200	70		Note 2						
Cell Transm	ittance	Tr		-	4.8	¥	%	W/O APF						
Mhita Chran							0.306							
White Chron	Haticity	y _w			0.360	1								
		R _x			0=00	Θ = 0°	Θ = 0°	Θ = 0°	Θ = 0°		0.646			Note 2
	Red	R _y			TYP.	0.339	TYP.		Note 3 Base on					
Reproduction) Green	G _x	- 0.03		0.271	+ 0.03		C Light						
of color (C light		G _y			0.581									
	Dlue	B _x			0.138									
	Blue	B _y			0.158									
Color Gamut (C light		t)		-	60%	2.	%	NTSC						
Response Time (Rising + Falling)		T _{RT}	Ta= 25° C Θ = 0°	-	-	35	ms	Note 4						

Note:

- 1. Viewing angle is the angle at which the contrast ratio is greater than 10. The viewing angles are determined for the horizontal or 3, 9 o'clock direction and the vertical or 6, 12 o'clock direction with respect to the optical axis which is normal to the LCD surface.
- Contrast measurements shall be made at viewing angle of Θ= 0 and at the center of the LCD surface. Luminance shall be measured with all pixels in the view field set first to white, then to the dark (black) state. Luminance Contrast Ratio (CR) is defined mathematically.

- 3. Transmittance is the Value with Polarizer.
- 4. The color chromaticity coordinates specified in Table 6 shall be calculated from the spectral data measured with all pixels first in red, green, blue and white. Calculation is based on C light.
- 5. The electro-optical response time measurements shall be made as FIGURE 6 by switching the "data" input signal ON and OFF. The times needed for the luminance to change from 10% to 90% is Tr, and 90% to 10% is Td.

	深圳市亿显国际科技有 YES-DISPLAY TECHNOLOGY			8. 0 寸液晶显示屏 8.0 Inch LCD Display Screen
File NO. REV		REV	A/01	http://www.yes-display.com


6. TFT Electrical Characteristics

6.1 Absolute Maximum Ratings

Parameter	Symbol	Min.	Max.	Unit	Remarks	
Maximum Temperature range	TOP	-20	+60	°C		
Storage Temperature	T _{ST}	-20	+60	°C		
Operating Ambient Humidity	Нор	10	90	%RH	Note 1-3	
Storage Humidity	Hst	10	90	%RH	X.	

Note:

- These range above is maximum value not the actual operating temperature.
 Actual Operating temperature is no more than 40°C and temperature refers to the Panel surface temperature; Length of operation: No more than 8 hours per day, and no more than 4 hours of continuous use one time.
- 2. BOE is not responsible for product problems beyond the use conditions.
- Temperature and relative humidity range are shown in the figure below; Wet bulb temperature should be 39 °C max. and no condensation of water.

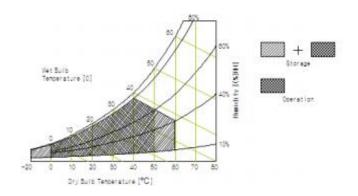


6.2 DC Characteristics

8.0 寸液晶显示屏 8.0 Inch LCD Display Screen

File NO. REV A/01 http://www.yes-display.com

D		Symbol		Values			None
Parar	Parameter		Min.	Тур.	Max.	Unit	Notes
		VDD	2.6	2.8	3.3	V	
Power Sup	ply Voltage	VSP	5.2	5.5	5.8	٧	
		VSN	-5.8	-5.5	-5.2	V	
	Power Supply Current		-	20	25	mA	
Power Sup				20	35	mA	1
		ISN	-	10	25	mA	Note 1
Power Co	nsump <mark>tio</mark> n	PLCD	-	0.2	0.375	W	1
	Input	VIH	0.7VDD		VDD	V	
CMOS	Voltage	VIL	0	(*)	0.3VDD	٧	
Interface	Output Voltage	VOH	0.8VDD	122	VDD	V	
		VOL	0	-	0.2VDD	V	


Notes: 1. The supply voltage is measured and specified at the interface connector of LCM. The current draw and power consumption specified is for Frame rate f_v =60Hz and Clock frequency = 201MHz. Test Pattern of power supply current a) Typ: Mosaic 8 x 6 Pattern(L0/L255)

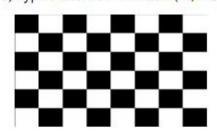

8.0 寸液晶显示屏 8.0 Inch LCD Display Screen

File NO. REV A/01 http://www.yes-display.com

6.3 LED Backlight Characteristics

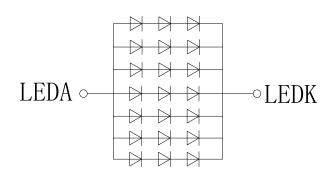

IF=20*7mA=140mA VF=3.1*7=21.7V

Item	Symbol	MIN	TYP	MAX	UNIT	Test Condition
Supply Voltage	Vf	-	9.6	-	V	If=140mA
Supply Current	If	-	140	-	mA	-
Luminous Intensity for LCM	-	-	350	-	cd/m ²	If=140mA
Uniformity for LCM	-	-	80	-	%	If=140mA
Life Time	-	-	50000	-	Hr	If=140mA
Backlight Color	White					

深圳市亿显国际科技有限公司 YES-DISPLAY TECHNOLOGY LIMITED.				8. 0 寸液晶显示屏 8.0 Inch LCD Display Screen
File NO.		REV	A/01	http://www.yes-display.com

7. Timing Characteristics

7.1 TFT Timing Characteristics

7.1.1 Display Timing Characteristics

Parameter	Symbol	Condition	Min.	Typ.	Max.	Unit
Differential input high threshold voltage	V _{Rx,TH}	VRXVCM=1.2V	-	0.2	-	V
Differential input low threshold voltage	V _{Rx,TL}	V RXVCM—1,2 V	-	-0.2	U=0	V
Input voltage range(single-end)	VRxIN	:	0	-	1.8	V
Differential input common mode voltage	Vrxvcm		VID /2	1.2	1.8 - VID /2	V
Differential input voltage	VID		0.2	0.4	0.6	V
Differential input leakage current	ILCLVDS		-10	-	10	uA
Differential input impedance	ZID		80	100	140	Ω

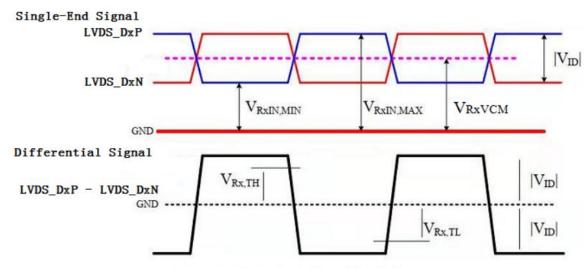



Figure: LVDS Receiver Differential Definition

Parameter	Symbol	Condition	Min.	Тур.	Max.	Unit
Clock Frequency	RxFCLK	12°	30	_	TBD	MHz
Input data skew margin	TRSKM	VID =200mV RxVCM=1.2V RxFCLK=81MHz	500	-	=	ps
Clock High Time	TLVCH	-	-	4/(7*RxFCLK)	-	ns
Clock Low Time	TLVCL	72	3 2 0	3/(7*RxFCLK)	-	ns
PLL wake- up-time	TenPLL	-		-	150	us


8.0 寸液晶显示屏 8.0 Inch LCD Display Screen

File NO. REV A/01

http://www.yes-display.com

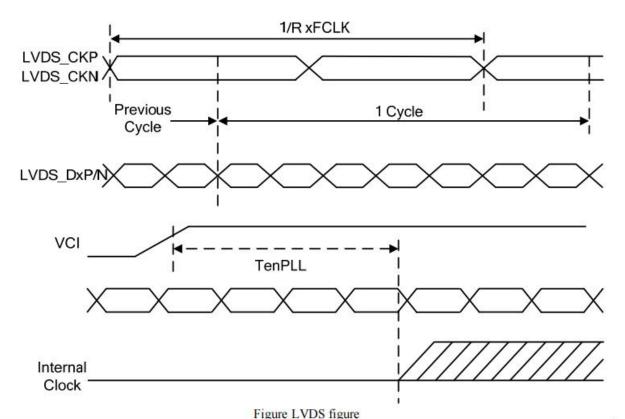

Parameter	Symbol	Min.	Typ.	Max.	Units	Condition
Modulation Frequency	SSCMF	23	-	93	KHz	and the continue of the Contin
Modulation Rate	SSCMR	-	-	+3	%	

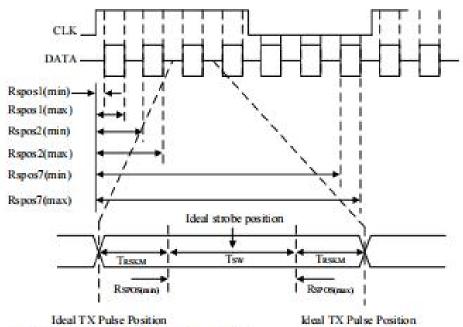


Tsw:Strobe width (Internal data sampling window) Rsvos:Receiver strobe position

TaskneReceiver strobe margin

8.0 寸液晶显示屏 8.0 Inch LCD Display Screen

File NO. REV A/01 http://www.yes-display.com

7.1.2 Reset timing characteristics

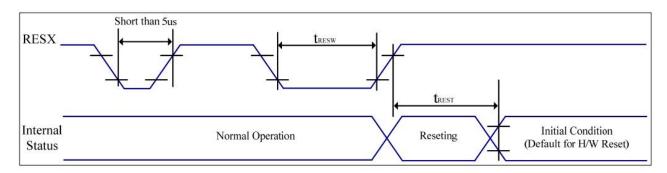

VSS=0V, IOVCC=1.65V to 3.6V, VCI=2.5V to 6.0V, Ta = -30°C to 85°C

Symbol	Parameter	Related Pins	MIN	TYP	MAX	Note	Unit
Tiesw	*1) Reset low pulse width	RESX	10			105	us
T_{rest} *2) Reset complete time			•	-	5	When reset applied during Sleep in mode	ms
	*2) Reset complete time	12	-		120	When reset applied during Sleep out mode	ms

Table: Reset input timing

Note 1: Due to an electrostatic discharge on RESX line, spike does not cause irregular system reset according to the table below.


RESX Pulse	Action
Shorter than 5us	Reset Rejected
Longer than 10us	Reset
Between 5us and 10us	Reset starts (It depends on voltage and temperature condition.)

Note 2: During the resetting period, the display will be blanked (The display is entering blanking sequence, which maximum time is 120ms, when Reset Starts in Sleep Out mode. The display remains the blank state in Sleep In mode), then return to default condition for H/W reset.

Note 3: During Reset Complete Time, ID1/ID2/ID3 and VCOM value in OTP will be latched to internal register.

After a rising edge of RESX, there is a H/W reset complete time (Trest) which lasted 5ms. The loading operation will be done every time during this reset.

Note 4: Spike Rejection also applies during a valid reset pulse as shown below:

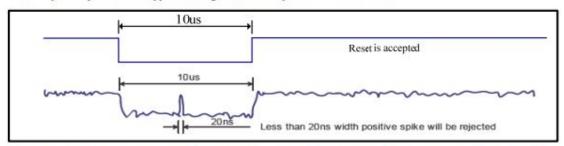

Note 5. It is necessary to wait 5msec after releasing RESX before sending commands. Also Sleep Out command cannot be sent for 120 msec.

深圳市亿显国际科技有限公司				8. 0 寸液晶显示屏
YES-DISPLAY TECHNOLOGY LIMITED.				8.0 Inch LCD Display Screen
File NO.		REV	A/01	http://www.yes-display.com

8. Inspection Standard

8.1 Incoming Inspection and Standard:

The below incoming inspection are applied to the TFT LCM Modules supplied by ShenZhen Yes-Display International Technology CO.,LTD. The customers should inspect the LCM within 14 days after receiving the goods. The result of inspection should be notified to the Seller in the writing copy promptly, if the customer do not send them within 14 days, the seller has the right to judge as acceptance of goods. The inspection lot size is treated as the quantity per shipment and per model. The sampling plan shall be inspected under MIL-STD015E in Level II by single sampling. The acceptable quality level (AQL) are categorized as below grades:

CRITICAL= 0.4%, MAJOR= 0.65%, MINOR= 1.5%

8.2 Inspection condition and Warranty policy:

The delivered LCM should be stored properly, ideally under climate-controlled environment at 25 (\pm 5) degree Celsius as well as 60% (\pm 10) Relative Humidity. The LCM shall be inspected in the viewing angle of 45 degree from the four major angles (U/D/L/R) under the single fluorescent lamp of 20W (equal to 300 to 500 lux). For warranty, ShenZhen Yes-Display International Technology CO.,LTD. will provide 12 months of warranty period as standard, and provide the new replacement for the defective products which belong to the Seller's responsibility verified by the quality department.

8.3 Inspection Criteria:

8.3.1 Critical defect

Item No.	Inspection content	Judgement
8.3.1.1	Functional defects	No display, abnormal display, short circuit, missing line, off-contrast and chromaticity, Touch Panel non-function
8.3.1.2	Model mixed	Other model mixed

8.3.2 Major defect:

Item No.	Inspection content	Judgement
8.3.2.1	Product indication	Missing model no. and wrong model no. is indicated on the LCM.
8.3.2.2	Glass cracking	The LCD and touch panel glass crack or breakage

8.0 寸液晶显示屏 8.0 Inch LCD Display Screen

File NO. REV A/01 http://www.yes-display.com

8.3.2.3	Missing	The function component missing such as
	component	connector, cable, etc.

8.3.3 Minor defect (LCD):

Item No.	Inspection content	Judgement			
8.3.3.1	Black/White spot Foreign particles Dust in the cell	$\varphi = (x+y)/2$ $\longrightarrow \begin{array}{c} X \\ \downarrow \\ \hline \end{array} \qquad \begin{array}{c} Y \\ \end{array} \qquad \begin{array}{c} Y \\ \hline \end{array} \qquad \begin{array}{c} Y \\ \hline \end{array} \qquad \begin{array}{c} Y \\ \end{array} \end{array} \qquad \begin{array}{c} Y \\ \end{array} \qquad \begin{array}{c$			
		Diameter (mm) Φ ≤ 0.1		Acceptable Q'ty Ignore	
		0.1 < Φ ≦	≤ 0.25	3	(Distance>5mm)
		0.25 < Ф		Not allowed	
8.3.3.2	Linear defect				
	Black/white line Black/white scratch	Length(mm)	Width ((mm)	Acceptable Q'ty
			W <u>≤</u> 0	.03	Ignore
	oor aton	L≦ 5.0	0.03 <w< td=""><td>∕<u>≤</u>0.07</td><td>3</td></w<>	∕ <u>≤</u> 0.07	3
			0.07	<w< td=""><td>Follow 8.3.3.1</td></w<>	Follow 8.3.3.1
8.3.3.3	Polarizer Bubbles	Diameter (mm)			Acceptable Q'ty
	Dent on polarizer	Ф ≦ 0.2		Ignore	
		0.2 < Φ ≤ 0.5		2 (Distance>5mm)	
		0.5 < Ф		Not allowed	

8.0 寸液晶显示屏 8.0 Inch LCD Display Screen

File NO. REV A/01 http://www.yes-display.com

8.3.3.4	Electrical Dot defect	Bright dot and Dark dot definition: or (Two adjacent dot) Inspection pattern: black, white, red, green, and blue screen.		
		Items		Acceptable Q'ty
		Bright dot	N ≦	4 (Distance >5mm)
		Dark dot	N ≦	4 (Distance >5mm)
8.3.3.5	Glass Defect- Corner chipping			
		Size(mm)		Judgement
		X≤3mm, Y≤S ,	Accept	t
		Z≦ T (S= ITO length, T=Single glass thickness)		
8.3.3.6	Glass Defect- Side fragment	Z		
		Size(mm)		Judgement
		X≦2 mm, Y≦ border edç	ge	Accept
		Z≦T		
		(T= single glass thickne	ess)	

8.3.4 Minor defect (Touch Panel)

Item No.	Inspection content	Judgement
	Content	

8.0 寸液晶显示屏 8.0 Inch LCD Display Screen

File NO. REV A/01 http://www.yes-display.com

8.3.4.1	Scratch, dust,		
	particles, foreign materials in	Size (mm)	Acceptable Q'ty
	"linear type"	W≦0.05mm, L≦10mm	Ignore
		0.05 mm< $W \le 0.07$ mm, $L \le 10$ mm	3
		W>0.07mm	Reject
8.3.4.2	Scratch, dust,		
	particles, foreign	Diameter (mm)	Acceptable Q'ty
	materials in "round type"	Ф≦ 0.25mm	Ignore
		0.25mm<Φ≦ 0.35mm	5
		Φ > 0.35mm	Reject
8.3.4.3	Air bubbles		
		Diameter (mm)	Acceptable Q'ty
		Φ≦ 0.2mm	Ignore
		0.2mm<Φ≦ 0.5mm	3
		Φ > 0.5mm	Reject
8.3.4.5	Scratch on		
	printing area	Size (mm)	Acceptable Q'ty
		W≦0.03mm, L≦5 mm	Ignore
		0.03mm <w≦0.05mm, l≦5mm<="" td=""><td>3</td></w≦0.05mm,>	3
		W>0.05mm or L> 5mm	Reject
8.3.4.6	Corner chipping	X Z	
		Size(mm)	Judgement
		X≤2mm, Y≤2mm Z<1/2T	Accept
		(T= single glass thickness)	

8.0 寸液晶显示屏 8.0 Inch LCD Display Screen

File NO. REV A/01 http://www.yes-display.com

8.3.4.7	Edge chipping	X X Y	
		Size(mm)	Judgement
		X≦3 mm, Y≦3 mm Z≦1/2 T (T= single glass thickness)	Accept

1	划市亿显国际科技 ES-DISPLAY TECHNOLO			8. 0 寸液晶显示屏 8.0 Inch LCD Display Screen
File NO.		REV	A/01	http://www.yes-display.com

9. Reliability Test Conditions and Methods

9.1 Reliability Test Conditions and Methods:

NO.	TEST ITEMS	TEST CONDITION	INSPECTION AFTER TEST		
1)	High Temperature Storage	80°C±2°C×96Hours			
2	Low Temperature Storage	-30°C±2°C×96Hours			
3	High Temperature Operating	70°C±2°C×96Hours			
4	Low Temperature Operating	-20°C±2°C×96Hours	Inspection after 2~4hours storage at room temperature, the samples		
(5)	Temperature Cycle(Storage)	-20°C \iff 25°C \iff 70°C (30min) (30min) 1cycle Total 10cycle	should be free from defects: 1, Air bubble in the LCD. 2, Seal leak. 3, Non-display. 4, Missing segments. 5, Glass crack. 6, Current IDD is twice higher than initial value. 7, The surface shall be free from damage. 8, The electric characteristic requirements		
6	Damp Proof Test (Storage)	50°C±5°C×90%RH×96Hours			
7	Vibration Test	Frequency:10Hz~55Hz~10Hz Amplitude:1.5MM X,Y,Z direction for total 3hours (packing condition test will be tested by a carton)			
8	Drooping Test	Drop to the ground from 1M height one time every side of carton. (packing condition test will be tested by a carton)	shall be satisfied.		
9	ESD Test	Voltage:±8KV,R:330Ω,C:150PF,Ai r Mode,10times			

8.0 寸液晶显示屏 8.0 Inch LCD Display Screen

File NO. REV A/01 http://www.yes-display.com

REMARK:

- 1, The Test samples should be applied to only one test item.
- 2, Sample side for each test item is 5~10pcs.
- 3, For Damp Proof Test, Pure water (Resistance \geq 10M Ω) should be used.
- 4,In case of malfunction defect caused by ESD damage, if it would be recovered to normal state after resetting, it would be judge as a good part.
- 5, EL evaluation should be accepted from reliability test with humidity and temperature: Some defects such as black spot/blemish can happen by natural chemical reaction with humidity and Fluorescence EL has.
- 6, Failure Judgment Criterion: Basic Specification Electrical Characteristic, Mechanical Characteristic, Optical Characteristic.

深圳市亿显国际科技有限公司 8.0 寸液晶显示屏 8.0 Inch LCD Display Screen File NO. REV A/01 http://www.yes-display.com

10. Cautions and Handling Precautions

10.1 Mounting method

The LCD panel of TFT module consists of two thin glass plates with polarizes which easily be damaged. And since the module in so constructed as to be fixed by utilizing fitting holes in the printed circuit board.

Extreme care should be needed when handling the LCD modules.

10.2 Caution of LCD handling and cleaning

When cleaning the display surface, Use soft cloth with solvent

[Recommended below] and wipe lightly

- Isopropyl alcohol
- Ethyl alcohol

Do not wipe the display surface with dry or hard materials that will damage the polarizer surface.

Do not use the following solvent:

- Water
- Aromatics

Do not wipe ITO pad area with the dry or hard materials that will damage the ITO patterns

Do not use the following solvent on the pad or prevent it from being contaminated:

- Soldering flux
- Chlorine (CI), Sulfur (S)

If goods were sent without being silicon coated on the pad, ITO patterns could be damaged due to the corrosion as time goes on.

If ITO corrosion happen by miss-handling or using some materials such as Chlorine (CI), Sulfur (S) from customer, Responsibility is on customer.

10.3 Caution against static charge

The LCD module use C-MOS LSI drivers, so we recommended that you:

Connect any unused input terminal to power or ground, do not input any signals before power is turned on, and ground your body, work/assembly areas, and assembly equipment to protect against static electricity.

深圳市亿显国际科技有限公司 8.0 寸液晶显示屏 YES-DISPLAY TECHNOLOGY LIMITED. 8.0 寸液晶显示屏 8.0 Inch LCD Display Screen http://www.yes-display.com

10.4 packing

- Module employs LCD elements and must be treated as such.
- Avoid intense shock and falls from a height.
- To prevent modules from degradation, do not operate or store them exposed direct to sunshine or high temperature/humidity

10.5 Caution for operation

- It is an indispensable condition to drive LCD's within the specified voltage limit since the higher voltage then the limit cause the shorter LCD life.
- An electrochemical reaction due to direct current causes LCD's undesirable deterioration, so that the use of direct current drive should be avoided.
- Response time will be extremely delayed at lower temperature then the operating temperature range and on the other hand at higher temperature LCD's how dark color in them. However those phenomena do not mean malfunction or out of order with LCD's, which will come back in the specified operation temperature.
- If the display area is pushed hard during operation, some font will be abnormally displayed but it resumes normal condition after turning off once.
- Slight dew depositing on terminals is a cause for electro-chemical reaction resulting in terminal open circuit.

Usage under the maximum operating temperature, 50%Rh or less is required.

10.6 storing

In the case of storing for a long period of time for instance, for years for the purpose or replacement use, the following ways are recommended.

- Storage in a polyethylene bag with the opening sealed so as not to enter fresh air outside in it. And with no desiccant.
- Placing in a dark place where neither exposure to direct sunlight nor light's keeping the storage temperature range.
- Storing with no touch on polarizer surface by the anything else.

[It is recommended to store them as they have been contained in the inner container at the time of delivery from us

10.7 Safety

 It is recommendable to crash damaged or unnecessary LCD's into pieces and wash off liquid crystal by either of solvents such as acetone and ethanol, which should be burned up later.

深圳市亿显国际科技有限公司			8.0 寸液晶显示屏	
YES-DISPLAY TECHNOLOGY LIMITED.			8.0 Inch LCD Display Screen	
File NO.		REV	A/01	http://www.yes-display.com

When any liquid leaked out of a damaged glass cell comes in contact with your hands, please wash it off well with soap and water


深圳市亿显国际科技有限公司
YES-DISPLAY TECHNOLOGY LIMITED.

8.0 寸液晶显示屏 8.0 Inch LCD Display Screen

File NO. REV A/01 http://www.yes-display.com

11. Packing Method

11.1 Method

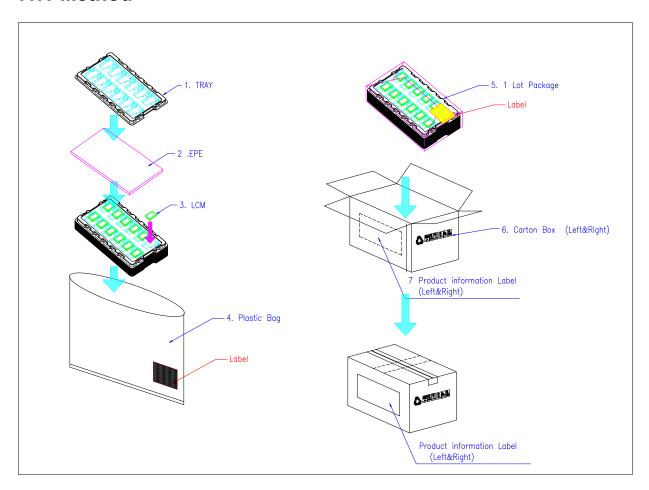

11.2 Packing Label

TBD